

# Installation Guide


## Curved PLINTH 16mm & 20mm

### **IMPORTANT – Please read prior to installation**

Thanks for purchasing a solid oak/MDF Veneered curved plinth. Prior to commencing installation please check the contents of this package to ensure that all necessary components are included. Please contact us immediately via email if any parts appear to be missing.


Please ensure that you assemble the goods in a clean, dry area, with plenty of space, and that you have the correct tools and equipment to hand. We recommend that you read the instructions in full before commencing assembly; and if unsure we advise an initial rehearsal of the installation procedure without physically assembling any items..

We advise using a damp cloth and – if necessary – a small amount of liquid soap to clean the product. Do not use abrasive materials. For more information, please view the full cleaning and aftercare guide on our website.

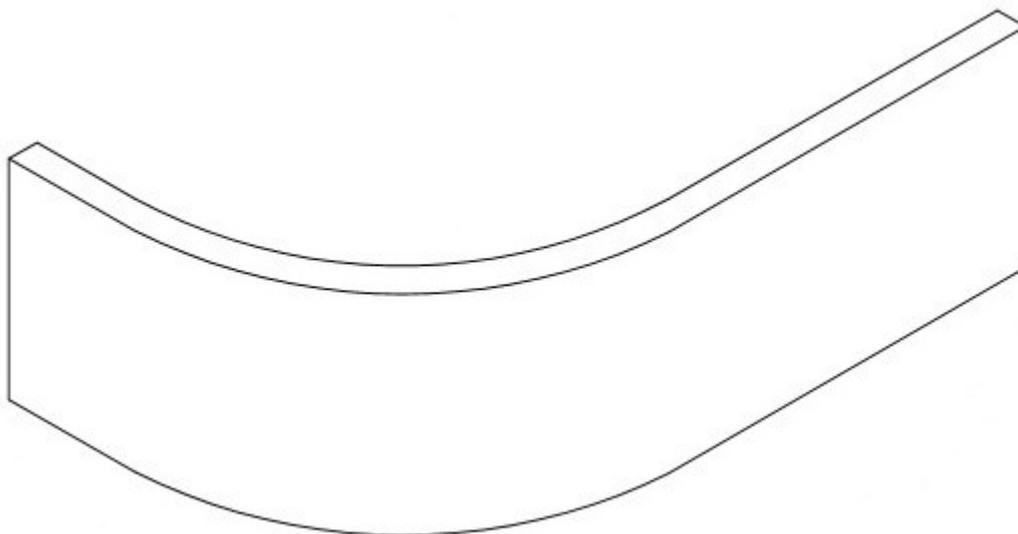



# PLINTH


1 x **1**

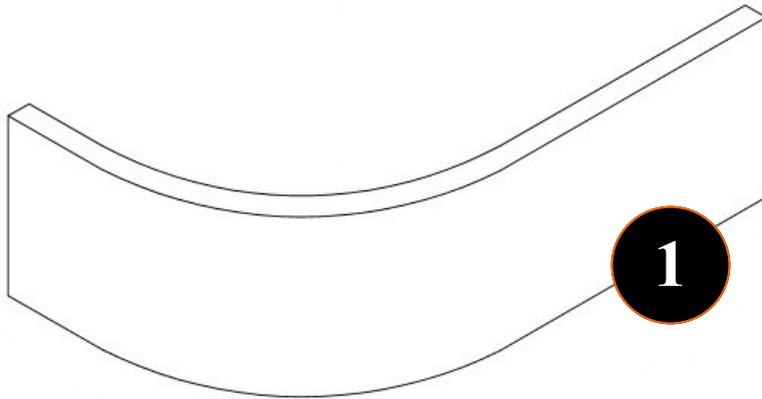


## Hardware (not included)

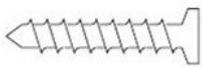**16 x A**  15mm

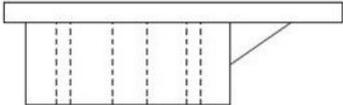**4 x B** 

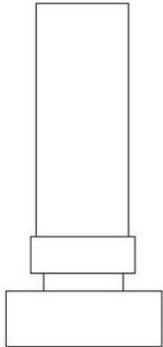
**4 x C** 

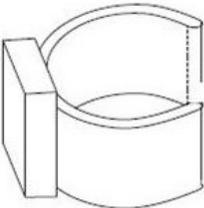**4 x D** 




2

Pre-drill the holes for the screws before using the 3mm drill bit. Make sure to use the correct drilling pattern.

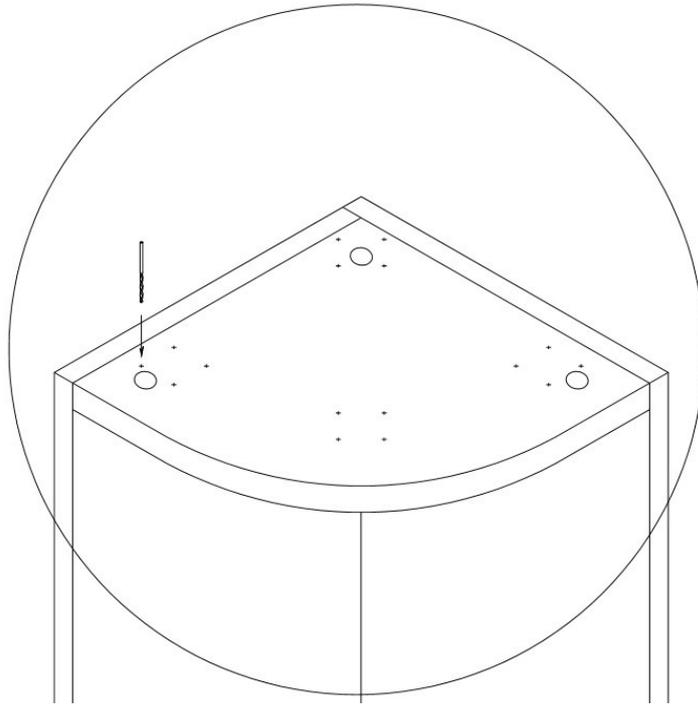


3

Fix leg holders **B** to the cabinet using screws **A** from leg pack supplied with cabinet.

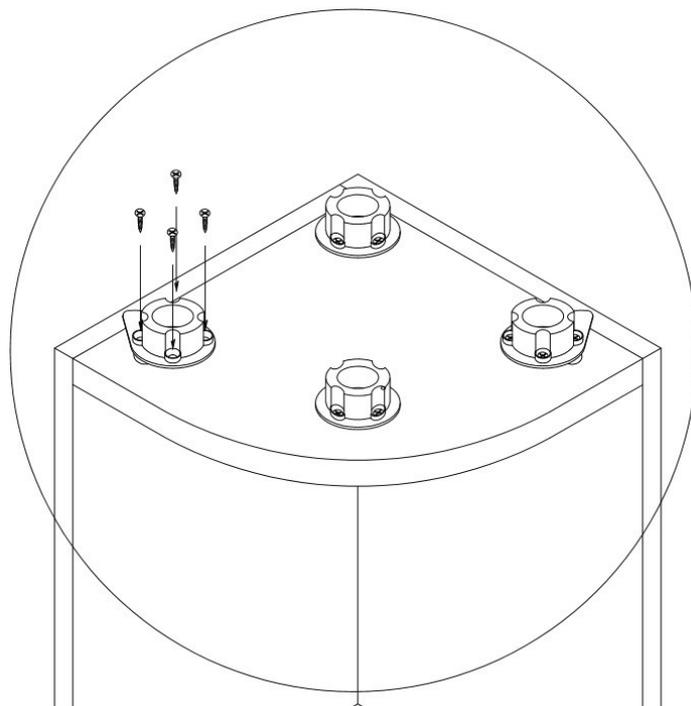


4

Fit four **C** legs into leg **B** holders by pressing them in.

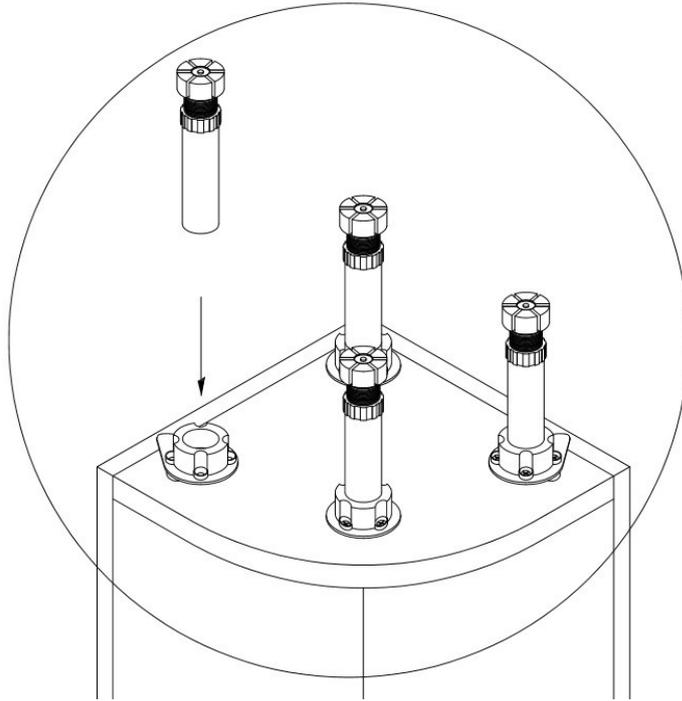

5


Clip plinth holders **D** on to the legs **B** .

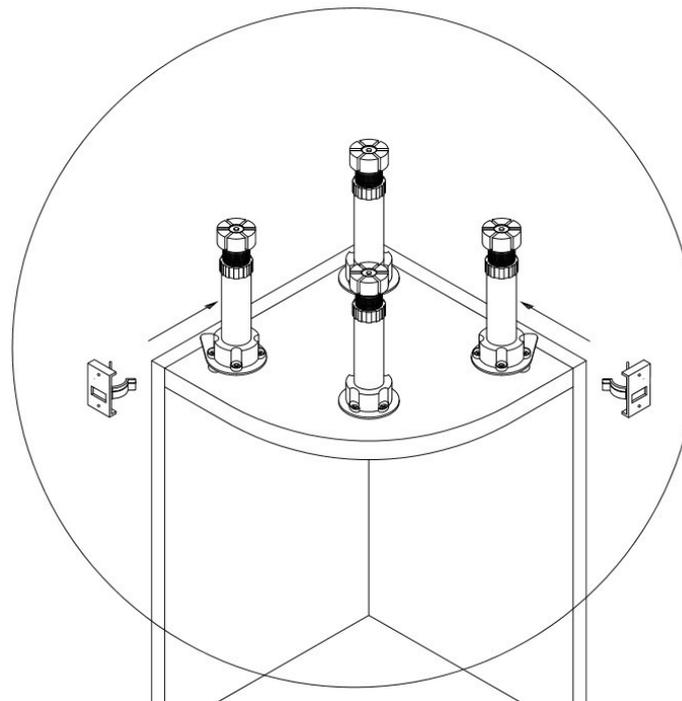

6


Place the plinth so that it is touching the plinth holders **D** and check the distance between edge of the cabinet and the front surface of the plinth.

The distance must be 20mm.

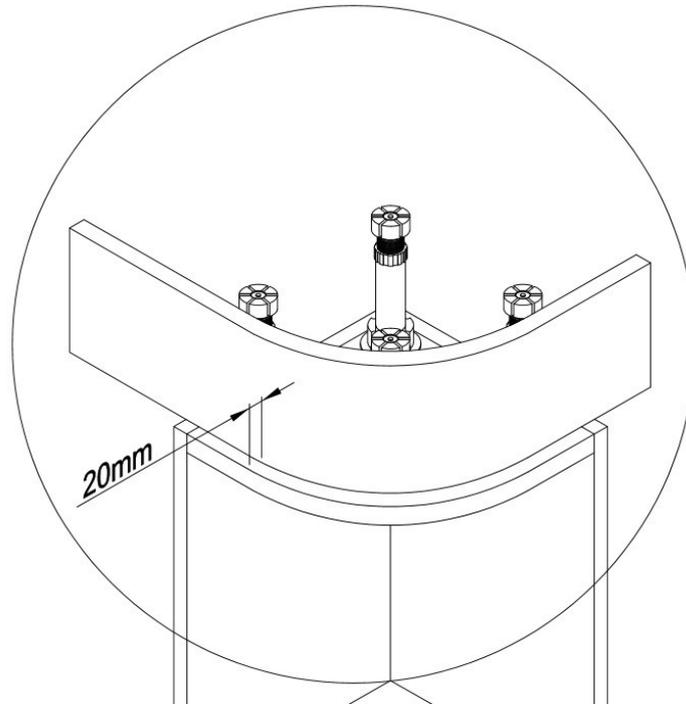


7

Take a pencil and create the necessary marker lines: you will need to mark two equal to the centre of the plinth holders and (if the cabinet is adjacent to a wall) one at the end of the cabinet.

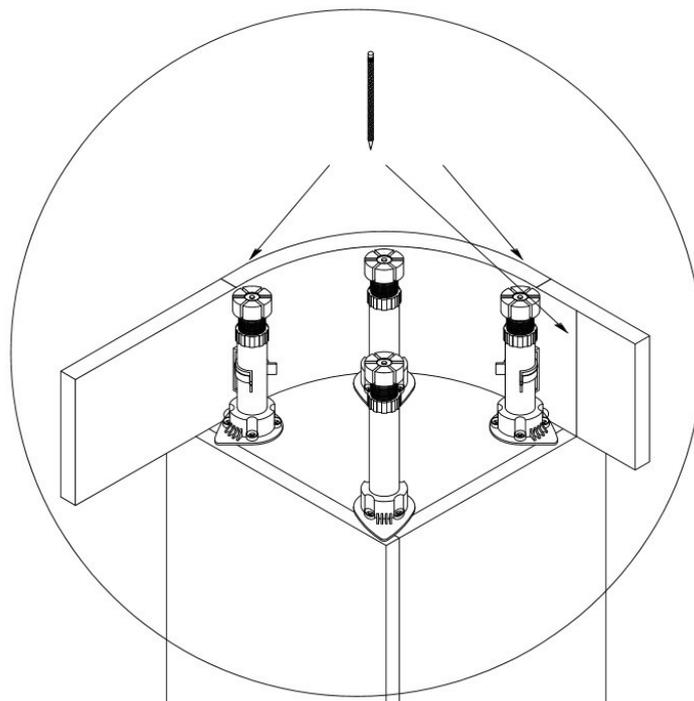

8

Using your pencil, create extensions of previously marked lines on the back side of the plinth. Next fix the plinth holders **D** using the screws provided with the leg pack. Please ensure that the distance is 30—60 mm from the edge of the plinth.

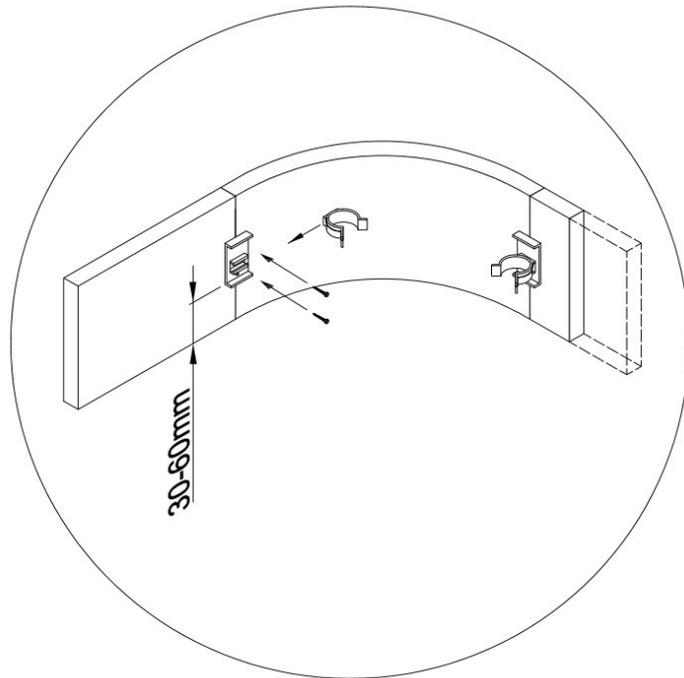

9

Your curved plinth is now ready to be fitted. Should you experience any difficulty during fitting, please try to keep the sliding elements of the plinth holders **D** as close to the centre of the plinth as possible. They will be set at the correct position after clipping onto the legs.

